


## WASTE FLUID EVACUATION PUMP KITS



Wall mounted pump kits used to empty waste oil and waste antifreeze receivers.

They included the pump listed for each model equipped with:

- Wall bracket
- Air connection kit with air pressure regulator for controlling pump speed, air quick coupler and nipple.
- Suction hose with cam-lock connector, shut-off valve and filter at pump inlet
- 5' discharge hose.

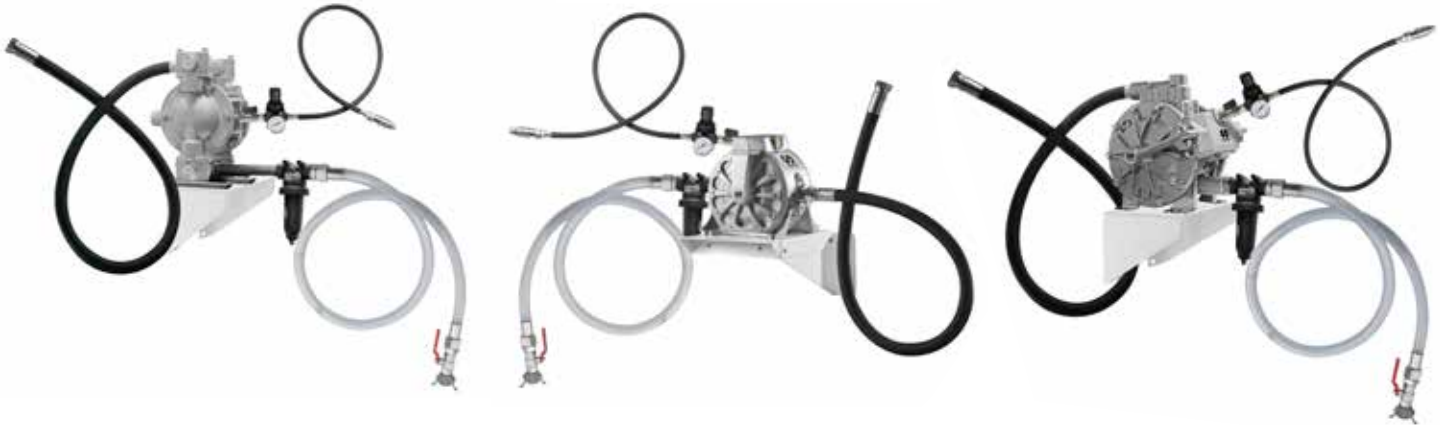

**379 701**

**Part No. 379 701**

Wall mounted waste fluid evacuation pump kit. Includes 1" - 46 gal/min UL listed diaphragm pump with aluminum and Buna-N wetted parts (pump Part No. 2836).

**379 016**

**Part No. 379 016**


Wall mounted waste fluid evacuation pump kit. Includes 1" - 28 gal/min diaphragm pump with aluminum and Buna-N wetted parts (pump Part No. 551 030).

**379 018**

**Part No. 379 018**

Wall mounted waste fluid evacuation pump kit. Includes 1" - 50 gal/min diaphragm pump with aluminum and Buna-N wetted parts (pump Part No. 555 030).

**ACCESSORIES**

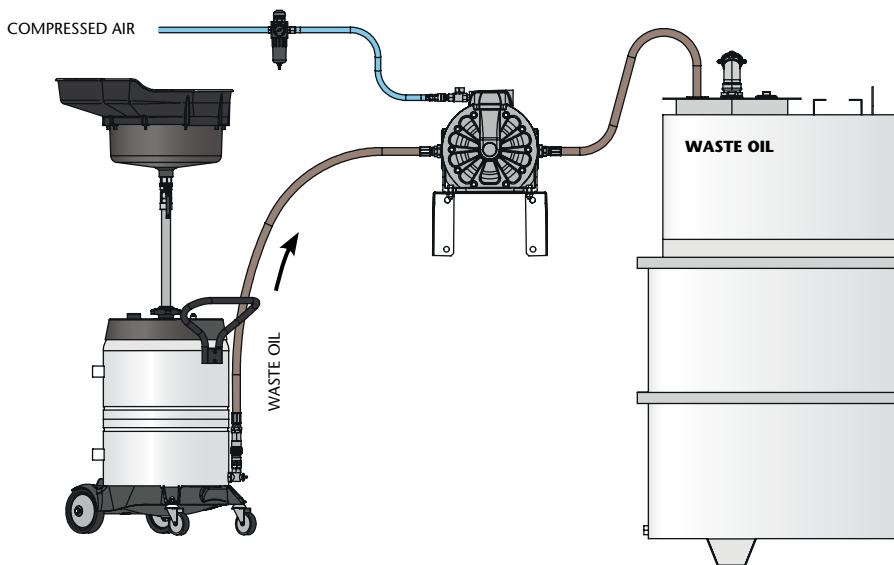

**Part No. 362 924**

Air bleeding valve, 1". When connected to the pump outlet, it helps to eliminate the air trapped in the pump and in the suction line aiding pump prime.

**Part No. OA-1EXT**

Overfill warning valve used to shut off the air supply to the pump when the tank approaches full capacity. It is automatically reset is emptied and air pressure in OA-1EXT is zero.

**08**

WASTE OIL