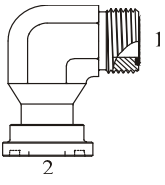
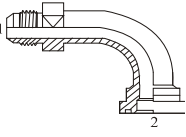
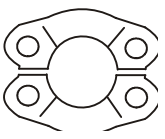
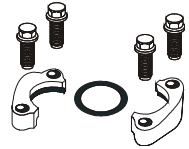
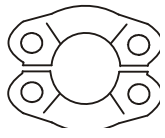



<b>9894</b> (FS1804)		90° Mâle ORFS / Bride Code 62 (Forgé)		
		90° ORFS Male / Code 62 Flange (Forged)		
	<b>Style No.</b>	T1	FL	
	9894-12-08	1 1/16-12	1/2	
	9894-12-12	1 1/16-12	3/4	
	9894-12-16	1 1/16-12	1	
	9894-16-12	1 5/16-12	3/4	
	9894-16-16	1 5/16-12	1	
	9894-16-20	1 5/16-12	1 1/4	
	9894-20-16	1 5/8-12	1	
	9894-20-20	1 5/8-12	1 1/4	
	<b>MORS X FL62 90°</b>	9894-20-24	1 5/8-12	1 1/2
		9894-24-20	1 7/8-12	1 1/4
		9894-24-24	1 7/8-12	1 1/2
		9894-24-32	1 7/8-12	2

<b>9896</b> (1804)		90° Mâle JIC / Bride Code 62 (Solide)		
		90° JIC Male / Code 62 Flange (Solid)		
	<b>Style No.</b>	T1	FL	
	9896-08-08	3/4-16	1/2	
	9896-12-12	1 1/16-12	3/4	
	9896-12-16	1 1/16-12	1	
	9896-12-20	1 1/16-12	1 1/4	
	9896-16-12	1 5/16-12	3/4	
	9896-16-16	1 5/16-12	1	
	9896-16-20	1 5/16-12	1 1/4	
	9896-16-24	1 5/16-12	1 1/2	
	<b>MJ X FL62 90°</b>	9896-20-16	1 5/8-12	1
		9896-20-20	1 5/8-12	1 1/4
		9896-20-24	1 5/8-12	1 1/2
		9896-24-20	1 7/8-12	1 1/4
		9896-24-16	1 7/8-12	1
		9896-24-24	1 7/8-12	1 1/2
	9896-24-32	1 7/8-12	2	
	9896-32-32	2 1/2-12	2	

<b>9903</b> (1901)		Demi Bride Code 61 (Pair)	
		Code 61 Split Flange (Pair)	
	<b>Style No.</b>	FL	
	9903-08	1/2	
	9903-12	3/4	
	9903-16	1	
	9903-20	1 1/4	
	9903-24	1 1/2	
	9903-32	2	
	9903-40	2 1/2	
	9903-48	3	
	9903-56	3 1/2	
9903-64	-		
<b>PAIR SPLIT FLANGE CODE 61</b>			

<b>Demi Bride Code 61 - KIT</b>			
<b>Code 61 Split Flange - KIT</b>			
<b>Style No.</b>	FL	BOLTS	
9903K-08	1/2	5/16X1 1/4	
9903K-12	3/4	3/8X1 1/4	
9903K-16	1	3/8X1 1/4	
9903K-20	1 1/4	7/16X1 1/2	
9903K-24	1 1/2	1/2X1 1/2	
9903K-32	2	1/2X1 1/2	
9903K-40	2 1/2	1/2X1 3/4	
9903K-48	3	-	
9903K-56	3 1/2	-	
9903K-64	-	-	
<b>KIT SPLIT FLANGE CODE 61</b>			

<b>Demi Bride Code 62 (Pair)</b>		
<b>Code 62 Split Flange (Pair)</b>		
<b>Style No.</b>	FL	
9906-08	1/2	
9906-12	3/4	
9906-16	1	
9906-20	1 1/4	
9906-24	1 1/2	
9906-32	2	
<b>PAIR SPLIT FLANGE CODE 62</b>		
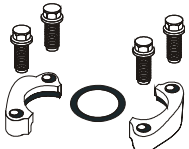
<b>Demi Bride Code 62 - KIT</b>			
<b>Code 62 Split Flange - KIT</b>			
<b>Style No.</b>	FL	BOLTS	
9906K-08	1/2	5/16X1 1/4	
9906K-12	3/4	3/8X1 1/2	
9906K-16	1	7/16X1 3/4	
9906K-20	1 1/4	1/2X1 3/4	
9906K-24	1 1/2	5/8X2 1/4	
9906K-32	2	3/4X2 3/4	
<b>KIT SPLIT FLANGE CODE 62</b>			

<b>9903K</b> (1901K)		Demi Bride Code 61 (Pair)	
		Code 61 Split Flange (Pair)	
<b>Style No.</b>	FL	BOLTS	
9903K-08	1/2	5/16X1 1/4	
9903K-12	3/4	3/8X1 1/2	
9903K-16	1	7/16X1 3/4	
9903K-20	1 1/4	1/2X1 3/4	
9903K-24	1 1/2	5/8X2 1/4	
9903K-32	2	3/4X2 3/4	
<b>KIT SPLIT FLANGE CODE 61</b>			