



<b>9713</b> (1700)			
Mâle JIC / Bride Code 61 (Solide) JIC Male / Code 61 Flange (Solid)			
Style No.	T1	FL	
9713-08-08	3/4-16	1/2	
9713-08-12	3/4-16	3/4	
9713-10-10	7/8-14	5/8	
9713-12-12	1 1/16-12	3/4	
9713-12-16	1 1/16-12	1	
<b>MJ X FL 61</b>	9713-12-20	1 1/16-12	1 1/4
	9713-12-24	1 1/16-12	1 1/2
	9713-16-12	1 5/16-12	3/4
	9713-16-16	1 5/16-12	1
	9713-16-20	1 5/16-12	1 1/4
	9713-16-24	1 5/16-12	1 1/2
	9713-20-16	1 5/8-12	1
	9713-20-20	1 5/8-12	1 1/4
	9713-20-24	1 5/8-12	1 1/2
	9713-20-32	1 5/8-12	2
	9713-24-16	1 7/8-12	1
	9713-24-20	1 7/8-12	1 1/4
	9713-24-24	1 7/8-12	1 1/2
	9713-24-32	1 7/8-12	2
	9713-32-24	2 1/2-12	1 1/2
	9713-32-32	2 1/2-12	2




<b>45° Mâle JIC / Bride Code 61 (Solide)</b> <b>45° JIC Male / Code 61 Flange (Solid)</b>			
Style No.	T1	FL	
9743-08-08	3/4-16	1/2	
9743-08-12	3/4-16	3/4	
9743-12-12	1 1/16-12	3/4	
9743-12-16	1 1/16-12	1	
9743-12-20	1 1/16-12	1 1/4	
9743-16-12	1 5/16-12	3/4	
9743-16-16	1 5/16-12	1	
9743-16-20	1 5/16-12	1 1/4	
9743-16-24	1 5/16-12	1 1/2	
9743-20-12	1 5/8-12	3/4	
9743-20-16	1 5/8-12	1	
9743-20-20	1 5/8-12	1 1/4	
9743-20-24	1 5/8-12	1 1/2	
9743-24-20	1 7/8-12	1 1/4	
9743-24-24	1 7/8-12	1 1/2	
9743-24-32	1 7/8-12	2	
9743-32-32	2 1/2-12	2	




**MJ X FL61 45°**

<b>9714</b> (FS1700)			
Mâle ORFS / Bride Code 61 (Solide) ORFS Male / Code 61 Flange (Solid)			
Style No.	T1	FL	
9714-12-12	1 1/16-12	3/4	
9714-12-16	1 1/16-12	1	
9714-16-12	1 5/16-12	3/4	
9714-16-16	1 5/16-12	1	
9714-16-20	1 5/16-12	1 1/4	
<b>MORFS X FL61</b>	9714-20-16	1 5/8-12	1
	9714-20-20	1 5/8-12	1 1/4
	9714-20-24	1 5/8-12	1 1/2
	9714-24-20	1 7/8-12	1 1/4
	9714-24-24	1 7/8-12	1 1/2
	9714-24-32	1 7/8-12	2




**MORS X FL61 45°**

<b>45° Mâle ORFS / Bride Code 61 (Forgé)</b> <b>45° ORFS Male /Code 61 Flange(Forged)</b>			
Style No.	T1	FL	
9744-12-12	1 1/16-12	3/4	
9744-16-16	1 5/16-12	1	
9744-20-20	1 5/8-12	1 1/4	
9744-24-24	1 7/8-12	1 1/2	

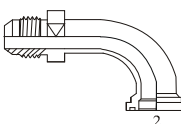


<b>90° Mâle JIC / Bride Code 61 (Solide)</b> <b>90° JIC Male / Code 61 Flange (Solid)</b>			
Style No.	T1	FL	
9793-08-08	3/4-16	1/2	
9793-08-12	3/4-16	3/4	
9793-10-10	7/8-14	5/8	
9793-12-12	1 1/16-12	3/4	
9793-12-16	1 1/16-12	1	
9793-12-20	1 1/16-12	1 1/4	
9793-12-24	1 1/16-12	1 1/2	
9793-16-12	1 5/16-12	3/4	
9793-16-16	1 5/16-12	1	
9793-16-20	1 5/16-12	1 1/4	
9793-16-24	1 5/16-12	1 1/2	



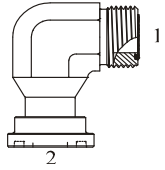
**MJ X FL61 90°**

Continue / Cont'd

<b>9793</b> (1704)				
90° Mâle JIC / Bride Code 61 (Solide) 90° JIC Male / Code 61 Flange (Solid)				
	<b>Style No.</b>	<b>T1</b>	<b>FL</b>	
	<b>Continue / Cont'd</b>			
	9793-20-12	1 5/8-12	3/4	
	9793-20-16	1 5/8-12	1	
	9793-20-20	1 5/8-12	1 1/4	
	9793-20-24	1 5/8-12	1 1/2	
	<b>MJ X FL61 90°</b>	9793-20-32	1 5/8-12	2
		9793-24-16	1 7/8-12	1
		9793-24-20	1 7/8-12	1 1/4
		9793-24-24	1 7/8-12	1 1/2
		9793-24-32	1 7/8-12	2
		9793-32-24	2 1/2-12	1 1/2
		9793-32-32	2 1/2-12	2


**9794**  
(FS1704)


90° Mâle ORFS / Bride Code 61 (Forgé)  
90° ORFS Male / Code 61 Flange (Forged)

	<b>Style No.</b>	<b>T1</b>	<b>FL</b>	
	9794-12-12	1 1/16-12	3/4	
	9794-12-16	1 1/16-12	1	
	9794-16-12	1 5/16-12	3/4	
	9794-16-16	1 5/16-12	1	
	9794-16-20	1 5/16-12	1 1/4	
	9794-20-16	1 5/8-12	1	
	9794-20-20	1 5/8-12	1 1/4	
	9794-20-24	1 5/8-12	1 1/2	
	<b>MORS X FL61 90°</b>	9794-24-20	1 7/8-12	1 1/4
		9794-24-24	1 7/8-12	1 1/2
		9794-24-32	1 7/8-12	2

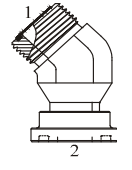
**9814**  
(FS1800)

Mâle ORFS / Bride Code 62 (Solide)  
ORFS Male / Code 62 Flange (Solid)


	<b>Style No.</b>	<b>T1</b>	<b>FL</b>	
	9814-08-08	3/4-16	1/2	
	9814-12-12	1 1/16-12	3/4	
	9814-12-16	1 1/16-12	1	
	9814-16-12	1 5/16-12	3/4	
	9814-16-16	1 5/16-12	1	
	<b>MORS X FL62</b>	9814-16-20	1 5/16-12	1 1/4
		9814-20-16	1 5/8-12	1
		9814-20-20	1 5/8-12	1 1/4
		9814-20-24	1 5/8-12	1 1/2
		9814-24-20	1 7/8-12	1 1/4
		9814-24-24	1 7/8-12	1 1/2
		9814-24-32	1 7/8-12	2

<b>Mâle JIC / Bride Code 62 (Solide)</b> <b>JIC Male / Code 62 Flange (Solid)</b>				<b>9816</b> (1800)
	<b>Style No.</b>	<b>T1</b>	<b>FL</b>	
	9816-08-08	3/4-16	1/2	
	9816-12-12	1 1/16-12	3/4	
	9816-12-16	1 1/16-12	1	
	9816-16-12	1 5/16-12	3/4	
	9816-16-16	1 5/16-12	1	
	9816-16-20	1 5/16-12	1 1/4	
	9816-16-24	1 5/16-12	1 1/2	
	9816-20-16	1 5/8-12	1	
	9816-20-20	1 5/8-12	1 1/4	
	9816-20-24	1 5/8-12	1 1/2	
	9816-24-20	1 7/8-12	1 1/4	
	9816-24-24	1 7/8-12	1 1/2	
	9816-32-32	2 1/2-12	2	

**45° Mâle ORFS / Bride Code 62 (Forgé)**  
**45° ORFS Male / Code 62 Flange (Forged)**

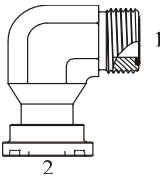
	<b>Style No.</b>	<b>T1</b>	<b>FL</b>	<b>9844</b> (FS1803)
	9844-12-12	1 1/16-12	3/4	
	9844-16-16	1 5/16-12	1	
	9844-20-20	1 5/8-12	1 1/4	
	9844-24-24	1 7/8-12	1 1/2	
	<b>MORS X FL62 45°</b>			

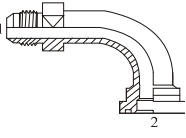
**45° Mâle JIC / Bride Code 62 (Solide)**  
**45° JIC Male / Code 62 Flange (Solid)**

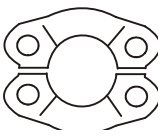
	<b>Style No.</b>	<b>T1</b>	<b>FL</b>	<b>9846</b> (1803)
	9846-08-08	3/4-16	1/2	
	9846-12-12	1 1/16-12	3/4	
	9846-12-16	1 1/16-12	1	
	9846-12-20	1 1/16-12	1 1/4	
	9846-16-12	1 5/16-12	3/4	
	9846-16-16	1 5/16-12	1	
	9846-16-20	1 5/16-12	1 1/4	
	9846-16-24	1 5/16-12	1 1/2	
	9846-20-12	1 5/8-12	3/4	
	9846-20-16	1 5/8-12	1	
	9846-20-20	1 5/8-12	1 1/4	
	9846-20-24	1 5/8-12	1 1/2	
	9846-24-20	1 7/8-12	1 1/4	
	9846-32-32	2 1/2-12	2	

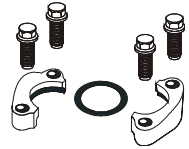
**MJ X FL62 45°**

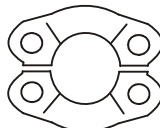
**MORS X FL62 45°**

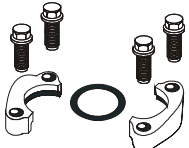
<b>9894</b> (FS1804)				90° Mâle ORFS / Bride Code 62 (Forgé) 90° ORFS Male / Code 62 Flange (Forged)			
	<b>Style No.</b>	<b>T1</b>	<b>FL</b>				
	9894-12-08	1 1/16-12	1/2				
	9894-12-12	1 1/16-12	3/4				
	9894-12-16	1 1/16-12	1				
	9894-16-12	1 5/16-12	3/4				
	9894-16-16	1 5/16-12	1				
	9894-16-20	1 5/16-12	1 1/4				
	9894-20-16	1 5/8-12	1				
	9894-20-20	1 5/8-12	1 1/4				
	<b>MORS X FL62 90°</b>	9894-20-24	1 5/8-12	1 1/2			
		9894-24-20	1 7/8-12	1 1/4			
		9894-24-24	1 7/8-12	1 1/2			
		9894-24-32	1 7/8-12	2			

<b>9896</b> (1804)				90° Mâle JIC / Bride Code 62 (Solide) 90° JIC Male / Code 62 Flange (Solid)			
	<b>Style No.</b>	<b>T1</b>	<b>FL</b>				
	9896-08-08	3/4-16	1/2				
	9896-12-12	1 1/16-12	3/4				
	9896-12-16	1 1/16-12	1				
	9896-12-20	1 1/16-12	1 1/4				
	9896-16-12	1 5/16-12	3/4				
	9896-16-16	1 5/16-12	1				
	9896-16-20	1 5/16-12	1 1/4				
	9896-16-24	1 5/16-12	1 1/2				
	<b>MJ X FL62 90°</b>	9896-20-16	1 5/8-12	1			
		9896-20-20	1 5/8-12	1 1/4			
		9896-20-24	1 5/8-12	1 1/2			
		9896-24-20	1 7/8-12	1 1/4			
		9896-24-16	1 7/8-12	1			
		9896-24-24	1 7/8-12	1 1/2			
	9896-24-32	1 7/8-12	2				
	9896-32-32	2 1/2-12	2				

<b>9903</b> (1901)				Demi Bride Code 61 (Pair) Code 61 Split Flange (Pair)			
	<b>Style No.</b>	<b>FL</b>					
	9903-08	1/2					
	9903-12	3/4					
	9903-16	1					
	9903-20	1 1/4					
	9903-24	1 1/2					
	9903-32	2					
	<b>PAIR</b>	9903-40	2 1/2				
	<b>SPLIT FLANGE</b>	9903-48	3				
	<b>CODE 61</b>	9903-56	3 1/2				
	9903-64	-					

<b>9903K</b> (1901K)				Demi Bride Code 61 - KIT Code 61 Split Flange - KIT			
	<b>Style No.</b>	<b>FL</b>	<b>BOLTS</b>				
	9903K-08	1/2	5/16X1 1/4				
	9903K-12	3/4	3/8X1 1/4				
	9903K-16	1	3/8X1 1/4				
	9903K-20	1 1/4	7/16X1 1/2				
	9903K-24	1 1/2	1/2X1 1/2				
	9903K-32	2	1/2X1 1/2				
	9903K-40	2 1/2	1/2X1 3/4				
	9903K-48	3	-				
	9903K-56	3 1/2	-				
	9903K-64	-	-				
					<b>KIT</b> <b>SPLIT FLANGE</b> <b>CODE 61</b>		

<b>9906</b> (1902)				Demi Bride Code 62 (Pair) Code 62 Split Flange (Pair)			
	<b>Style No.</b>	<b>FL</b>					
	9906-08	1/2					
	9906-12	3/4					
	9906-16	1					
	9906-20	1 1/4					
	9906-24	1 1/2					
	9906-32	2					
				<b>PAIR</b> <b>SPLIT FLANGE</b> <b>CODE 62</b>			

<b>9906K</b> (1902K)				Demi Bride Code 62 - KIT Code 62 Split Flange - KIT			
	<b>Style No.</b>	<b>FL</b>	<b>BOLTS</b>				
	9906K-08	1/2	5/16X1 1/4				
	9906K-12	3/4	3/8X1 1/2				
	9906K-16	1	7/16X1 3/4				
	9906K-20	1 1/4	1/2X1 3/4				
	9906K-24	1 1/2	5/8X2 1/4				
	9906K-32	2	3/4X2 3/4				
				<b>KIT</b> <b>SPLIT FLANGE</b> <b>CODE 62</b>			