


## Bendix® TCS-9000™ Control Valve

[SD-03-3674](#)

Service New Pc. No.	Supply	Delivery	Comments	Handle Text
802033	3/8"	3/8"	Self-returning	No Handle Cap
K031988	3/8"	3/8"	Self-returning	No Handle Cap
K024944	1/4"	1/4"	Self-returning	Rear Brake
K024946	3/8"	3/8"	Self-returning	Trailer Brake
K024947	3/8"	3/8"	Self-returning	Rear Brake
K024948	3/8"	3/8"	Positioning	Trailer Brake - Not for Parking

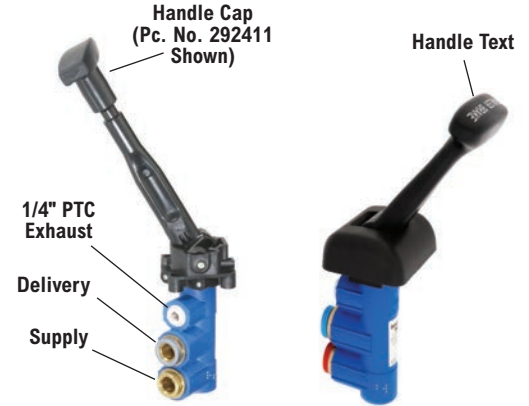

\*PTC – Push-To-Connect Fittings


## Bendix® TR-2™ Inversion Valve

- Available Remanufactured Exchange
- Maintenance Kit 281138N

V.M.R.S. 13-010-047

[SD-03-4650](#)

**NOTE:** With 125 psi supply pressure, valve must begin to exhaust at 65 psi nominal ascending control pressure. Valve must deliver full supply pressure with 40 psi nominal descending control pressure.

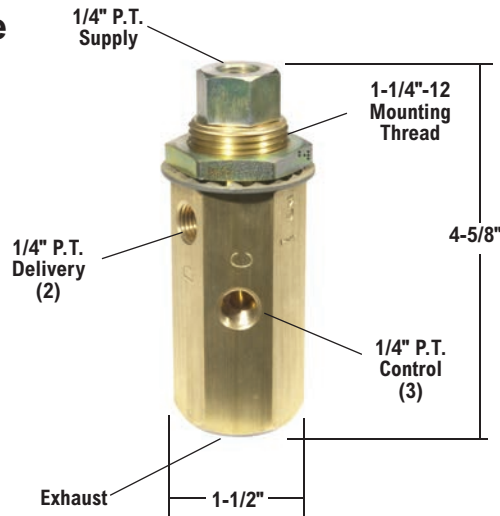

Reman. Exch. Pc. No.	Service New Pc. No.	Comments
277340RX	277340N	—
—	101125N	Brass Body

## Bendix® TR-3™ Inversion Valve


- Available Remanufactured Exchange

V.M.R.S. 13-010-047

[SD-03-4650](#)

**NOTE:** With common control & supply pressure, inlet opens at “A” descending pressure and exhaust opens at “B” ascending pressure.

Reman. Exch. Pc. No.	Service New Pc. No.	A (psi)	B (psi)
—	280758N	45	60
281318RX	281318N	35	70
281459RX	281459N	25	40
*101450RX	*101450N	25	40

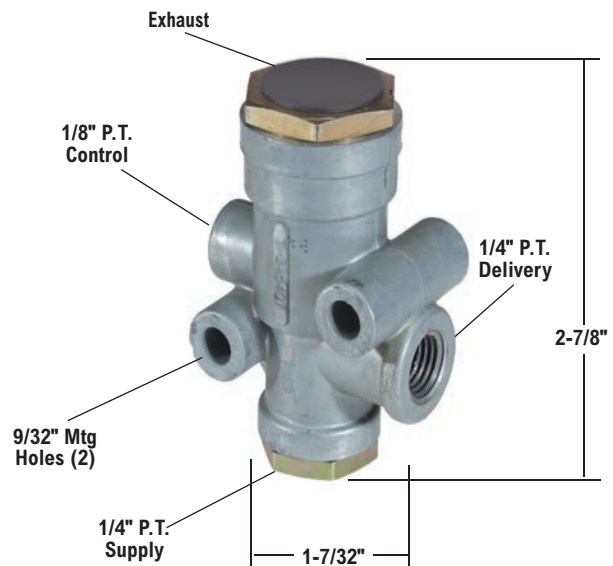

\*Special-Duty Bus Application