

PROTECT YOUR AIR BRAKE SYSTEM!

Pressure Protection Valves are Used to Isolate Auxiliary Air Systems from the Brake System. They are Designed to Preserve Air for Braking in the Event the Auxiliary System Develops a Leak.


- Assembled & Individually Tested in the USA!
- Hard Anodized Finish for Superior Corrosion Resistance
- Features an Internal Check Valve
- Includes an Integrated Filter
- Same Heavy Duty Seals as the TEV
- Two 3/8"-18 NPTF Ports
- Aluminum Die-Cast Body
- Choice of Two Pressure Settings
- Brass Internal Components



P/N	DESCRIPTION	INLET PORT	OUTLET PORT	NOM. CLOSING PRESSURE
51350	Pressure Protection Valve	3/8"-18 NPTF	3/8"-18 NPTF	70 PSI
51351	Pressure Protection Valve	3/8"-18 NPTF	3/8"-18 NPTF	60 PSI

PR-2 STYLE PRESSURE PROTECTION VALVE

- Replaces BENDIX PR-2
- Opening PSI is 15-20 PSI Higher than Closing PSI
- To Adjust Closing PSI: Loosen Nut and Turn Knob

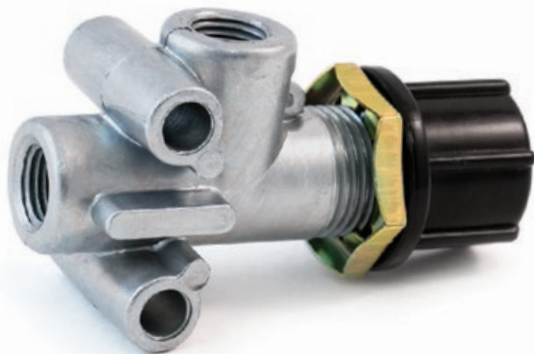

P/N	SUPPLY	DELIVERY	CLOSING PSI
401286	1/4"	1/4"	65

PR-4 STYLE PRESSURE PROTECTION VALVE

- Replaces BENDIX PR-4
- Opening PSI is 10 PSI Higher than Closing PSI



P/N	SUPPLY	DELIVERY	CLOSING PSI
401181	1/4"	1/4"	85

ST-3 STYLE SAFETY VALVE

- Protects the Air Brake System Against Excessive Air Pressure Build-Up
- 150 PSI Cracking Pressure



P/N	DESCRIPTION
401206	ST-3 Style Safety Valve

PRESSURE PROTECTION VALVE

- Normally Closed
- Opening PSI: 60-80 PSI
- Closing PSI: 46 PSI



P/N	PORTS	MAX PSI
401207	1/4"	150

TP-3 STYLE TRACTOR PROTECTION VALVE

- Trailer Service & Emergency Ports: 1/2"
- Tractor Service Port: 3/8"
- Tractor Emergency Port: 1/4"



P/N	DESCRIPTION
401228	TP-3 Style Tractor Protection Valve

INLINE PRESSURE PROTECTION VALVE

- Designed to Isolate Vehicle Air Systems in Case of Leakage
- Protects the Integrity of the Air Supply
- 75 PSI Open, 60 PSI Close
- 1/4" Tube O.D.



P/N	DESCRIPTION
401818	Inline Pressure Protection Valve

PRESSURE PROTECTION VALVES

- Protects Primary Air Source Against Loss of Air Pressure Downstream
- Designed for In-Tank Mounting on Tanks with Dual Outlet Ports



P/N	INLET PORTS	OUTLET PORTS	NOM. OPENING PRESSURE	NOM. CLOSING PRESSURE	CAP COLOR
401152	3/8 NPTM	3/8 NPTF	55 PSI	45 PSI	Black
401153	3/8 NPTM	3/8 NPTF	85 PSI	67 PSI	Red
401154	1/2 NPTM	3/8 NPTF	55 PSI	45 PSI	Black
401155	1/2 NPTM	3/8 NPTF	85 PSI	67 PSI	Red
401156	1/2 NPTM	1/4 NPTF*	100 (Max) PSI	70 (Min) PSI	Red

* One Outlet Port is Plugged




RELAY EMERGENCY VALVE
With Ratio Feature

P/N	SUPPLY	TANK	SERVICE	EMERGENCY	CRACK PRESSURE
401229	3/8" (x4)	3/4"	1/4"	1/4"	4.5 PSI



TP-5 STYLE TRACTOR PROTECTION VALVE
Replaces Control Valve Manifold

P/N	FRONT SERVICE	REAR SERVICE	TRAILER SERV. EMERG.	TRAILER EMERGENCY	TRAILER SERVICE	TRAILER CONTROL	STOP LIGHT SWITCH
401234	3/8" NPT	3/8" NPT	3/8" NPT	1/2" NPT	1/2" NPT	3/8" NPT	1/4" NPT

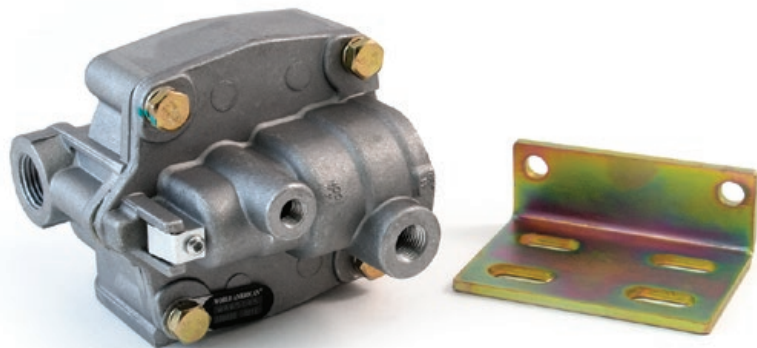

BP-R1 STYLE BOBTAIL PROPORTIONING VALVES
With Mounting Bracket

P/N	SUPPLY	DELIVERY	SERVICE	CONTROL	CRACK PRESSURE
401235	1/2"	3/8" (x4)	1/4"	1/8"	4.0 PSI
401236	1/2"	3/8" (x4)	1/4"	1/8"	5.5 PSI